

SPEEDCOM

COMMUNICATIONS


Advices for Antenna Installation

- If the car is made of Carbon fiber or fiber Glass you must put a Ground Plane between the car body and antenna base.
- Mustn't make any loops with the antenna cable. The antenna cable must be straight all the way (through the roll bars, for example).



- Once the BNC conector is assembled:

- Check continuity between the center pin (4) and the exterior of the BNC connector (3). You must not find continuity between them.
- Check continuity between center pin of BNC connector (4) and the center of the antenna base (1). There should be continuity.
- Check continuity between exterior of BNC connector (3) and the exterior of antenna base (2). There should be continuity.

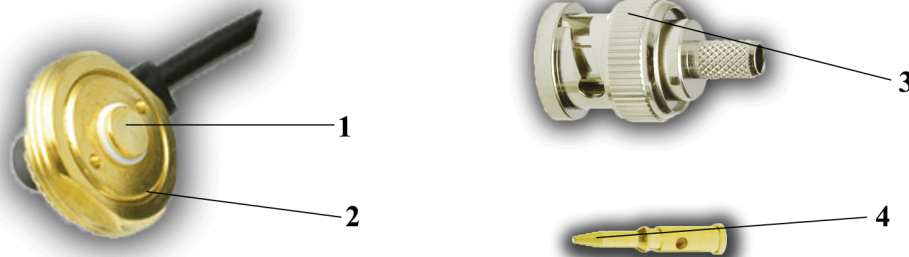

- Be sure that the center pin of the antenna (1) touch the center of the antenna base and the exterior part has to make contact with the car or the ground plane.